



CE REV 006A

**High Quality Nautical Equipment**

# BOILER B3

**B3 15**

**B3 20**


**B3 25**

**B3 30**

**B3 40**

**B3 60**

**B3 80**

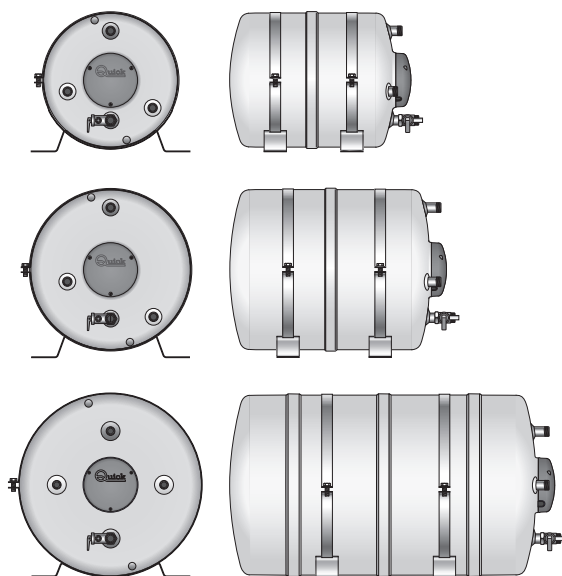

**IT**

Manuale d'uso

**EN**

User's Manual

**FR**

Manuel de l'utilisateur

**DE**

Benutzerhandbuch

**ES**

Manual del usuario

**PT**

Manual de uso

**SE**

Bruksanvisning

**NL**

Handleiding

**BOILER SERIE B3**

**WATER HEATER SERIES B3**

**CHAUFFE-EAU SERIE B3**

**BOILER BAUREIHE B3**

**CALENTADOR SERIE B3**

**AQUECEDOR SÉRIE B3**

**VATTENVÄRMARE SERIE B3**

**BOILER SERIE B3**



<b>IT</b>	<b>INDICE</b>	Pag. 4 Pag. 5 Pag. 6 Pag. 7 Pag. 8/9	Caratteristiche tecniche Installazione Schema di collegamento Uso - Avvertenze importanti Manutenzione
<b>EN</b>	<b>INDEX</b>	Pag. 10 Pag. 11 Pag. 12 Pag. 13 Pag. 14/15	Technical data Installation Connection diagram Usage - Warning Maintenance
<b>FR</b>	<b>SOMMAIRE</b>	Pag. 16 Pag. 17 Pag. 18 Pag. 19 Pag. 20/21	Caractéristiques techniques Installation Schéma de câblage Utilisation - Avertissements importants Entretien
<b>DE</b>	<b>INHALTSANGABE</b>	Seite 22 Seite 23 Seite 24 Seite 25 Seite 26/27	Technische Eigenschaften Installation Anschlussplan Gebrauch - Wichtige Hinweise Wartung
<b>ES</b>	<b>INDICE</b>	Pág. 28 Pág. 29 Pág. 30 Pág. 31 Pág. 32/33	Características técnicas Instalación Esquema de montaje Uso - Advertencias importantes Mantenimiento
<b>PT</b>	<b>ÍNDICE</b>	Pág. 34 Pág. 35 Pág. 36 Pág. 37 Pág. 38/39	Características técnicas Instalação Esquema de conexão Uso - Avisos importantes Manutenção
<b>SE</b>	<b>INNEHÅLLSFÖRTECKNING</b>	Sid. 40 Sid. 41 Sid. 42 Sid. 43 Sid. 44/45	Tekniska egenskaper Installation Kopplingsschema Användning - Viktiga föreskrifter Underhållsarbete
<b>NL</b>	<b>INDEX</b>	Pag. 46 Pag. 47 Pag. 48 Pag. 49 Pag. 50/51	Technische eigenschappen Installatie Aansluitingsschema Gebruik - Belangrijke waarschuwingen Onderhoud



## NAUTIC WATER HEATER

Our long experience operating in the nautical field has given us the means to supply a new series of water heaters with innovative characteristics compared with other heaters available on the market.

The advantages given by Quick® Nautic boilers, are:

- high quality of materials ensure the product is both reliable and long lasting.
- Heat exchanger with a large exchanging surface.
- Producing hot water also by means of an electric element, which is provided with an adjustable and safety thermostat.
- Relief/non return valve that protects the tank against overpressure and drains off water from the boiler when no longer used.
- The installation is easy and practical on a flat area.

**BEFORE USING THE WATER HEATER READ CAREFULLY THIS INSTRUCTION MANUAL.  
IF IN DOUBT, PLEASE CONTACT THE NEAREST "QUICK®" DEALER.**



**WARNING:** use this water heater in the applications described in this manual. Don't use the equipment for any other purpose. Quick® will not be held responsible for damage to equipment and/or personal injuries caused by a misuse of the equipment.

**PACKAGE CONTAINS:** water heater - mounting - bolts, nuts and screws (for assembly) - user's manual - conditions of warranty.

## INSTALLATION SITE

The water heater has to be placed in a dry and well-ventilated location. This precaution is required, even though water heaters are made of sea environment resistant materials, since electrical systems are present (in models provided). Moreover, if installed in non-ventilated environments, condensation could occur and could be mistaken for a leak.

## INSTALLATION

- Put mounting (17) on the tank (1) using studs and nuts provided (18, 19, 20).
- Fix water heater on flat surface or inclined plane or wall, as shown in fig. 1, using proper mountings for the weight of the water heater and for the type of installation site in the boat.



**WARNING:** the weight of water heater/unit in the technical data refers to the empty unit. In order to have the gross weight add to the empty weight, the water amount. (1 liter of water will almost weigh 1 Kg. / 2,2 lb).

- Carry out the hydraulic connections, relating to the input and output of tap water and from the engine cooling to the heat exchanger, as shown in fig. 2. Keep the connections between engine cooling system and heat exchanger as short as possible.



**WARNING:** the overpressure release pipe must be positioned sloping evenly downwards in a location protected from the formation of ice.



**WARNING:** water might drip from the overpressure release pipe of the device, and this pipe must be left open to the atmosphere.



**WARNING:** when fittings are used on water outlets, use Loctite 243, 577 or Teflon on the threads in order to ensure tightness. Make sure that there is no water leakage.



FIG.1

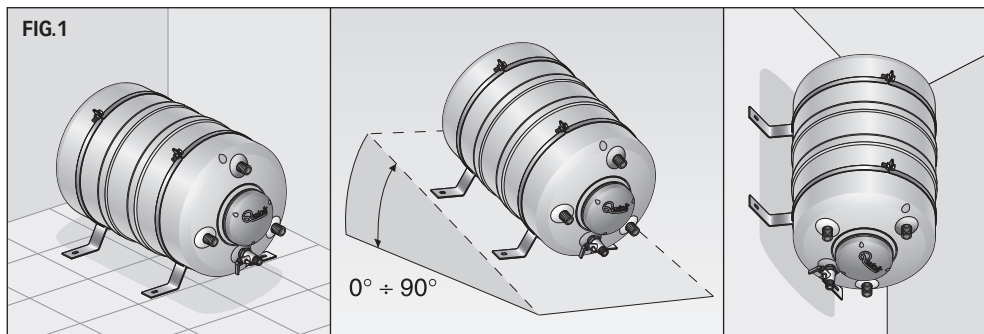


FIG.2

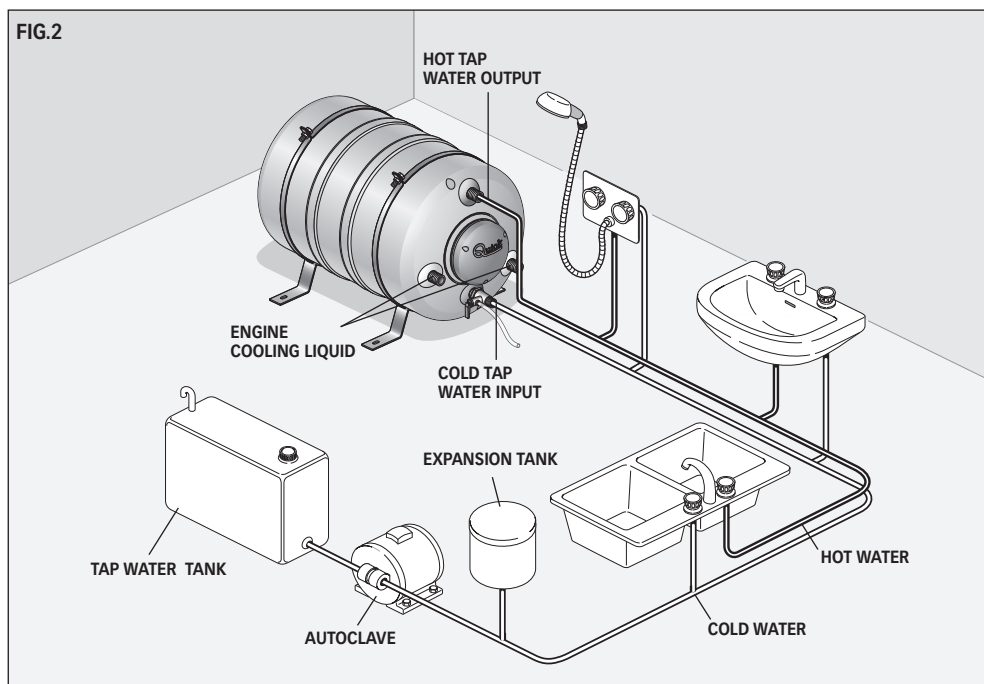


FIG.3


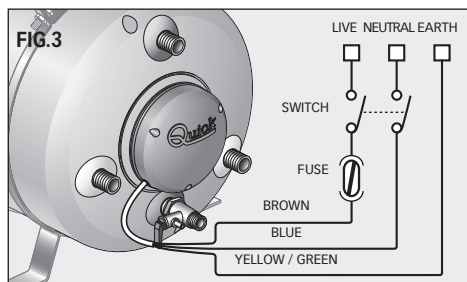


FIG.4



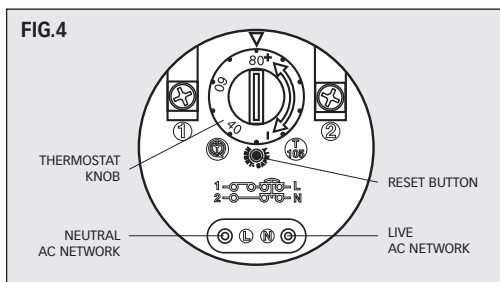

**WARNING:** follow the instructions of the boat engine manufacturer on how to connect engine cooling liquid to the heat exchanger.

- Fit the stub pipe (6) to the relief valve (4) using the hose clamp (5).  
Fit the pipe so as to allow any possible water leak not to cause damage to parts of the boat.
- Open up hot water taps of the washbasins and start the water pump. This allows water to fill the water heater and force air out of the water heater and pipes. Close taps as soon as air free water comes out of the taps.
- Check that there are no leaks on pipe joints.

### UNIT POWER SUPPLY

The unit is provided with power supply cable for AC current. See fig. 3 for the connection. Make sure the water heater operating voltage is the same as that provided by AC network.

A double pole switch has to be included on the electric installation in order to turn on and off the unit, as well as a fuse of suitable rating. The insulation between connection contacts of the AC network must be at least 3 mm (1/8"). The connections to AC network must be done following the National Specifications on electrical installations.



**WARNING:** before carrying out the connection make sure the cables are not live.



**WARNING:** in case the power supply cable is damaged, ensure it is replaced by a Quick service center. In order to avoid accidents, the equipment has to be opened by authorized personnel only. If opened by an unauthorized person, the warranty is considered void.



**WARNING:** never activate the heating element unless the boiler is fully filled with water or the heating element will be permanently damaged and the protection devices (double thermostat) will fail.



**WARNING:** never install the boiler in closed or not well ventilated rooms.



**WARNING:** never install the boiler in a room filled with gas or in potentially inflammable rooms.


### THERMOSTAT ADJUSTMENT

The standard temperature value of the thermostat is 60°C (140°F). If you wish to change it, follow the instructions below:

- shut down power supply.
- Remove the protection cover (11) in order to reach the thermostat (9).
- Adjust the thermostat knob with a screwdriver (fig. 4) and turn it to the required temperature.
- Replace the protection cover (11).
- Switch on power supply.



The thermostat sets the water temperature only with electric element operation.

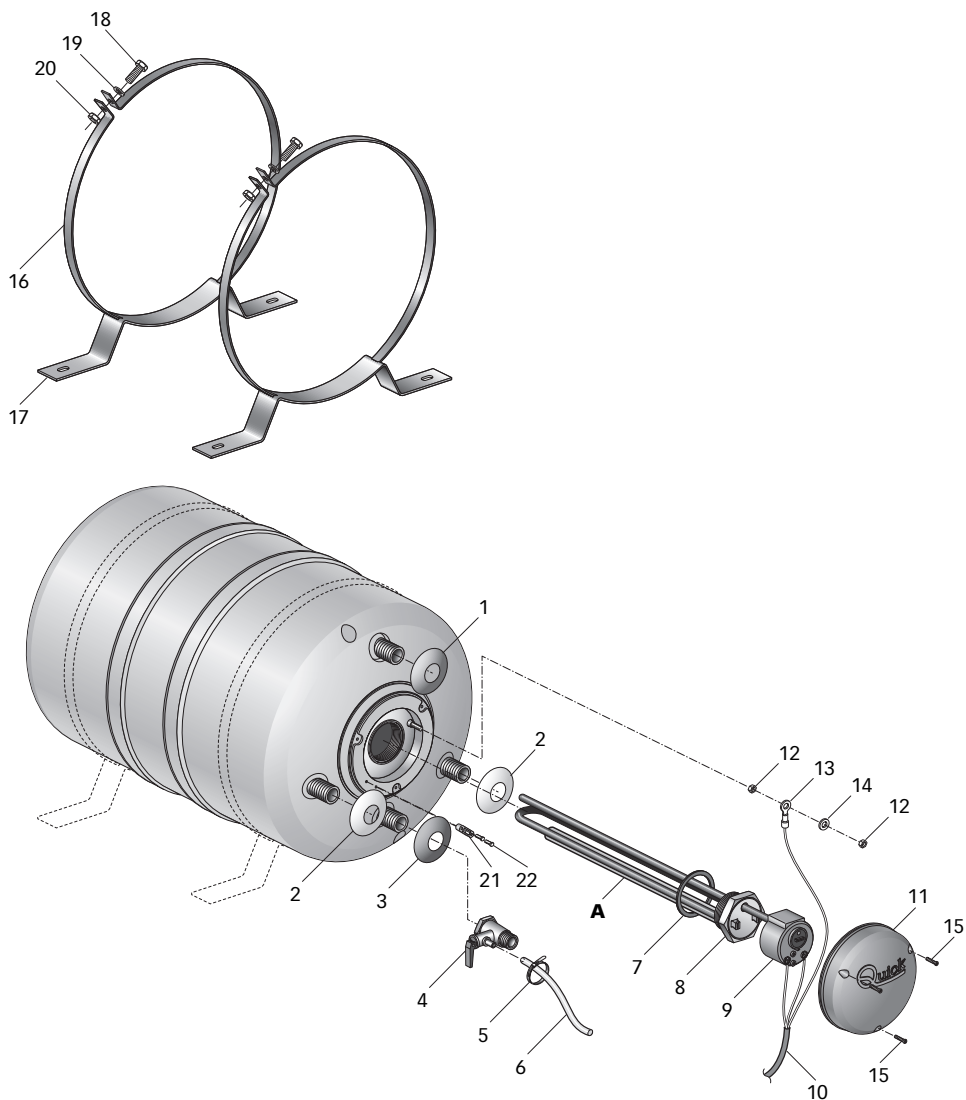



POS.	DESCRIPTION
1	Red plastic washer
2	White plastic washer
3	Blue plastic washer
4	Relief/non return valve
5	Hose clamp
6	Discharge pipe
7 A	Element gasket from S/N 100.000
7 B	Element gasket from S/N 200.000
8A	Electric element 1200W 220V
8B	Electric element 500W 220V
8C	Electric element 1200W 110V
8D	Electric element 600W 110V
9	Bi-Thermostat
10	Power supply cable
11A	B3 resistor cover 220V
11B	B3 resistor cover 110V
12	Nut
13	Ground cable terminal
14	Washer
15	Screw
16A	Tank mounting B3 300
16B	Tank mounting B3 360
16C	Tank mounting B3 400
17A	Metal bracket B3 300
17B	Metal bracket B3 400
18	Screw
19	Washer
20	Nut
21	Cable clamp
22	Screw



**WARNING:** Quick® nautic water heaters are provided with a double thermostat with manual reset that shuts down power supply in case of an excessive water temperature.

If it happens, follow the instructions below:

- shut down power supply.
- Remove the protection cover (11) in order to reach the thermostat (9).
- Push the reset button on the double thermostat (fig. 4).
- Replace on the protection cover (11).
- Switch on power supply.



**WARNING:** if the high temperature safety system switches on repeatedly, call Quick® service center.

## MAINTENANCE

We recommend checking the magnesium anode (A) every 12 months.

Replace the anode if its size has been reduced significantly. This simple and preventive maintenance will ensure a long life of the equipment.



During wintertime, when the water heater is not in use it should be drained using the lever of the valve (4). This is to avoid serious damage caused by freezing.

The overpressure release device must be activated regularly to remove calcium deposits and to ensure that it is not blocked.

Periodically check the joints of the water pipe installation; check the tightness of the securing screws and replace them in case they are worn or corroded.

Also periodically check the electrical system working order.


## BOILER B3 DA 15L A 80L




WATER HEATER BX FROM 15L TO 80L - CHAUFFE-EAU BX DE 15L À 80L - BOILER BX VON 15L BIS 80L

CALENTADOR BX DA 15 A 80L - AQUECEDOR BX DE 15 ATÉ 80L - BOILER BX FRÅN 15 TILL 80L - VATTENVÄRMARE BX VAN 15 TOT 80L


### B3 15L 4 gal - B3 20L 5,3 gal - B3 25L 6,6 gal

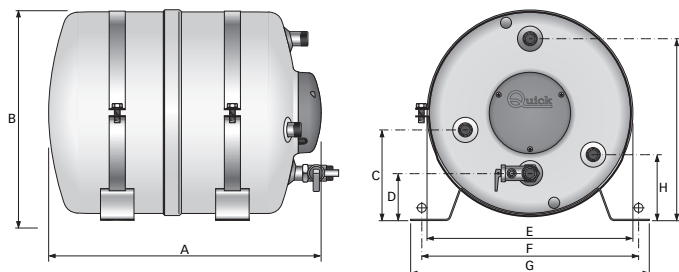

### B3 30L 8 gal - B3 40L 10,5 gal

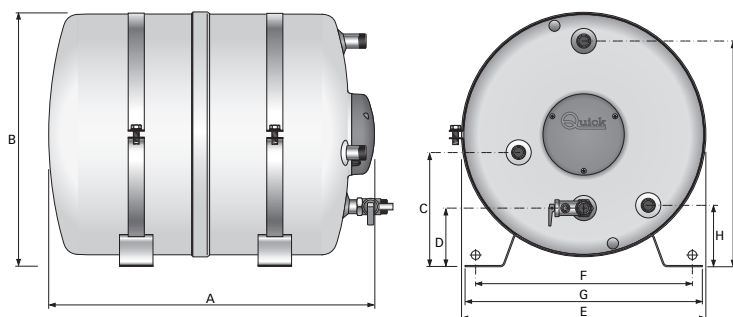

### B3 60L 15,8 gal - B3 80L 21,1 gal

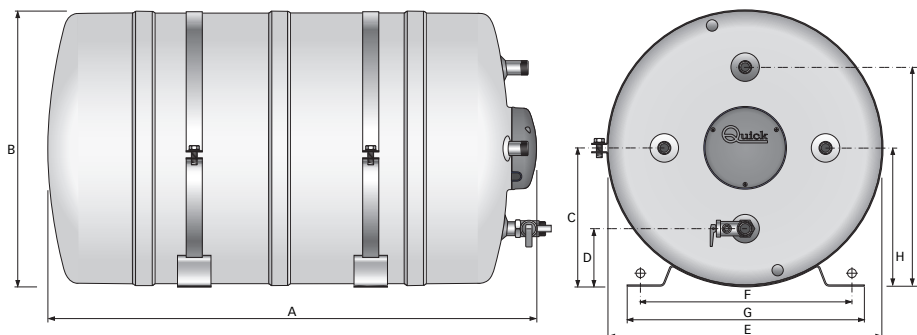






# DIMENSIONI mm (inch)

 DIMENSIONS - DIMENSIONS - ABMESSUNGEN - DIMENSIONES - DIMENSÕES - DIMENSIONER - AFMETINGEN



	15L 3.9 gal	20L 5.3 gal	25L 6.6 gal
A	405 (15 <sup>61</sup> / <sub>64</sub> )	500 (19 <sup>11</sup> / <sub>16</sub> )	605 (23 <sup>13</sup> / <sub>16</sub> )
B	316 (12 <sup>7</sup> / <sub>16</sub> )		
C	135 (5 <sup>5</sup> / <sub>16</sub> )		
D	70 (2 <sup>3</sup> / <sub>4</sub> )		
E	Ø 300 (11 <sup>13</sup> / <sub>16</sub> )		
F	304 ÷ 318 (11 <sup>31</sup> / <sub>32</sub> ÷ 12 <sup>1</sup> / <sub>2</sub> )		
G	355 (13 <sup>31</sup> / <sub>32</sub> )		
H	98 (3 <sup>7</sup> / <sub>8</sub> )		
I	270 (10 <sup>5</sup> / <sub>8</sub> )		

	30L 7.9 gal	40L 10.5 gal
A	495 (19 <sup>31</sup> / <sub>64</sub> )	620 (24 <sup>13</sup> / <sub>32</sub> )
B	381 (15")	
C	171 (6 <sup>3</sup> / <sub>4</sub> )	
D	88 (2 <sup>3</sup> / <sub>4</sub> )	
E	Ø 366 (14 <sup>13</sup> / <sub>32</sub> )	
F	304 ÷ 318 (11 <sup>31</sup> / <sub>32</sub> ÷ 12 <sup>1</sup> / <sub>2</sub> )	
G	360 (14 <sup>3</sup> / <sub>16</sub> )	
H	92 3 <sup>5</sup> / <sub>8</sub> )	
I	388 (13 <sup>5</sup> / <sub>16</sub> )	

	60L 15.8 gal	80L 21.1 gal
A	721 (28 <sup>3</sup> / <sub>8</sub> )	921 (36 <sup>1</sup> / <sub>2</sub> )
B	404 (15 <sup>29</sup> / <sub>32</sub> )	
C	204 (8 <sup>1</sup> / <sub>32</sub> )	
D	85 (3 <sup>11</sup> / <sub>32</sub> )	
E	Ø 400 (15 <sup>3</sup> / <sub>4</sub> )	
F	270 ÷ 285 (10 <sup>5</sup> / <sub>8</sub> ÷ 11 <sup>7</sup> / <sub>32</sub> )	
G	320 (12 <sup>19</sup> / <sub>32</sub> )	
H	204 (8 <sup>1</sup> / <sub>32</sub> )	
I	323 (12 <sup>23</sup> / <sub>32</sub> )	

[illegible]

# BOILER B3

R006A

15L 20L 25L 30L 40L 60L 80L



**IT** Codice e numero seriale del prodotto

**EN** Product code and serial number

**FR** Code et numéro de série du produit

**DE** Code- und Seriennummer des Produkts

**ES** Código y número de serie del producto

**PT** Código e número de série do produto

**SE** Kod och produktens serienummer

**NL** Code en serienummer van het product

**Quick**<sup>®</sup>  
Nautical Equipment

QUICK® S.p.A. - Via Piangipane, 120/A - 48124 Piangipane (RAVENNA) - ITALY  
Tel. +39.0544.415061 - Fax +39.0544.415047  
[www.quickitaly.com](http://www.quickitaly.com) - E-mail: [quick@quickitaly.com](mailto:quick@quickitaly.com)