Manual

Storm Lantern / Kerosene Lantern NOCK Mysingen X

NOCK Mysingen X is a replica of old-fashioned storm lanterns. You need to treat it with care and handle it gently – then it will last for many years and create a cozy atmosphere around you! Please read and follow this manual carefully before first use. Keep this document for future reference

Safety Instructions

- Fill the tank with max 2 dl (200 ml) of fuel
- Never let the storm lantern burn unattended
- Keep a safe distance from flammable objects
- Do not place the lantern on surfaces that can burn
- Never cover the lantern – high risk of fire
- Use only pure paraffin or lamp oil
- The lantern gets hot when in use – handle carefully
- Let the lantern cool completely after use
- Never refill while the flame is burning
- When filled with oil, always keep the lantern vertical – otherwise leakage may occur
- Do not tilt or swing the lantern – it may leak
- Empty the tank before transport

If Your Storm Lantern Leaks

Incorrect handling may cause a high risk of leakage. Make sure none of the following problems have occurred.

- Never fill more than 2 dl into the tank
- Always hang the lantern in a vertical position
- Keep the lantern still – shaking oil may leak
- Do not move the lantern when filled
- Empty the tank before transport
- Avoid high temperatures
- Turn down the wick when extinguishing the lantern
- If leakage occurs, empty all oil and let the lantern dry overnight before refilling

**For those who want to know more: if you fill the tank above a certain level, the expanded oil will overflow from the tank itself and into the surrounding drainage container, which by design is not sealed. The oil will then slowly begin to run out of the drainage container, indicating that you have overfilled it. If the drainage container were completely sealed, the reservoir could crack or, in the worst case, explode when the oil becomes hot. This is why all storm lanterns will leak if you fill them too much..

NOCK Mysingen X – important parts

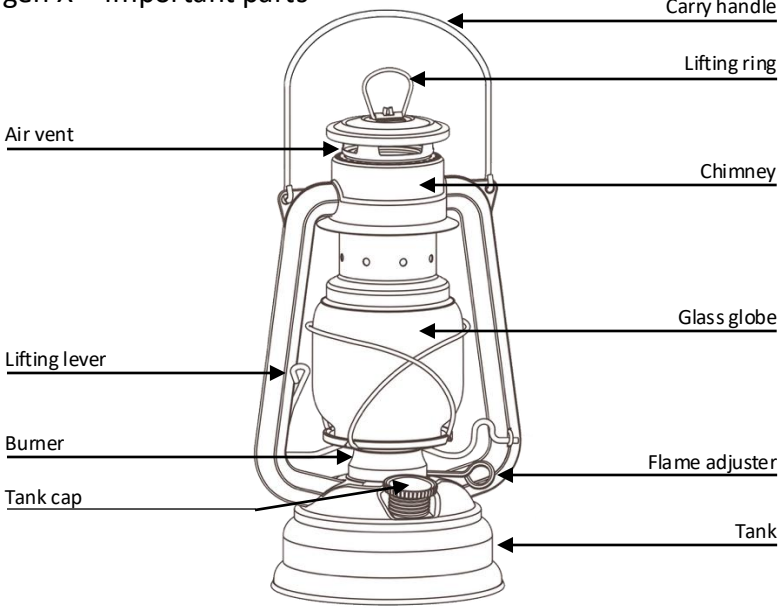

Filling Lamp Oil

- Open the tank cap and fill with max 2 dl oil
- Place the cap on its edge on the table and tilt the lantern as shown in the picture – the oil should at most reach the filling hole
- Before lighting, wait about 20 minutes until the wick has absorbed fuel and is moist

Lighting the Lantern

- Lift the glass globe by pressing down the lever
- Hook the lever in its lower position
- Adjust the wick so that 1–2 mm is visible
- Light the wick with a match or lighter
- When burning, carefully lower the glass globe by releasing the lever

Adjusting / Extinguishing the Flame

- Turn the flame adjuster gently back and forth
- Set the flame height to about 1.5–2 cm
- Too high a flame creates soot that stains the ceiling
- The flame should not flicker or move back and forth
- To extinguish, turn down the wick until the flame dies
- Make sure the flame is completely out

Replacing the Wick

- Lift the ring while holding the lamp steady – you will feel it spring
- When the chimney's inner part is fully raised, the glass globe can be tilted aside
- Turn the entire burner clockwise using the flame adjuster
- The burner's outer casing will detach
- Remove the casing
- Take out the wick holder insert
- Unscrew the old wick upwards (turning clockwise) and discard it
- Insert a new wick from above and screw counterclockwise so it is drawn downwards
- Press the wick gently until the screw catches
- Adjust the wick height to 1–2 mm visible
- Reinsert the wick holder with the rubber gasket in place
- Replace the burner casing and lock it by turning counterclockwise until the side flanges snap into place
- Tilt the glass globe back and ensure it is locked again by the chimney
- The lantern is now ready for use